



Alfa Laval Unique RV-P

Regulating valves

Introduction

The Alfa Laval Unique RV-P Regulating Valve is an automatic hygienic regulating valve with an electro-pneumatic actuator for use in applications that require precision control of flow as well as pressure, temperature, and tank fluid levels.

Application

The Unique RV-P Regulating Valve is designed for precise flow control in the dairy, food, beverage, biotechnology, pharmaceutical and many other industries.

Benefits

- Precision flow control
- Advanced hygienic valve design
- Dedicated protection
- Reliable operation
- Large operating range


Standard design

Built on the Alfa Laval Unique SSV platform, the Unique RV-P Regulating Valve consists of valve body, valve plug, lip seal, and an external normally open (NO) actuator with bonnet. The actuator is fitted to the valve body by means of a clamp. The Kv value is flexible as lower element can be exchanged. Manual and aseptic versions are available. Upon request, the valve can also be supplied with a normally closed (NC) actuator.

Working principle

The Alfa Laval Unique RV-P Regulating Valve is controlled from a remote location by means of compressed air. An actuator with an integrated IP converter IP converter transforms the electrical signal to a pneumatic signal. This signal conversion is based on a highly accurate and reliable contactless AMR sensor, making it insensitive to vibrations and pressure shocks. The pneumatic signal is transmitted to the integrated positioner which operates by means of the force-balance principle, ensuring that the position of the actuator piston is directly proportional to the input signal. Signal range and zero point can be adjusted individually. The actuator can be used for split-range operation by using a different measuring spring.

Certificates



TECHNICAL DATA

| Valves | |
|---|------------------------------|
| Max. product pressure: | 1000 kPa (10 bar) |
| Min. product pressure: | Full vacuum |
| Temperature range: | -10°C to 140°C (EPDM) |
| Flow range Kv ($\Delta P = 1\text{bar}$): | 0.5 to 110 m ³ /h |
| Max. pressure drop: | 500 kPa (5 bar) |

| Actuator | |
|-------------------------|---|
| Air quality | |
| Air connection: | 6/4 air tube with air fitting R1/8" (BSP) |
| Max. pressure: | 600 kPa (6 bar) |
| Working pressure: | 400 kPa (4 bar) |
| Max. size of particles: | 0.01 mm |
| Max. oil content: | 0.08 ppm |
| Dew point: | 10°C below ambient temp. or lower |
| Max. water content: | 7.5 g/kg |


| I/P converter | |
|--------------------------|----------------------|
| Signal range: | 4 - 20 mA (standard) |
| Input resistance: | 200 Ω |
| Inductivity/capacitance: | Negligible |

PHYSICAL DATA

| Materials, Valves | |
|-----------------------------|--|
| Product wetted steel parts: | 1.4404 (316L) |
| Other steel parts: | 1.4301(304) |
| Product wetted seals: | EPDM |
| External finish: | Semi-bright (blasted) |
| Internal finish: | Bright (polished) RA<0.8 μm |

| Materials, Actuator | |
|----------------------------|---|
| Actuator cases: | Aluminium with plastic coating |
| Diaphragms: | NBR with reinforced fabric insert |
| Springs: | Stainless steel uncovered/spring steel epoxy resin coated |
| Actuator stem: | Polyamide |
| Screws, nuts: | Stainless steel, polyamide |
| Other parts: | Stainless steel |

Valve body combinations



| Accuracy | |
|--|--|
| Deviation: | $\leq 1.5\%$ |
| Hysteresis: | $\leq 0.5\%$ |
| Sensitivity: | $< 0.1\%$ |
| Influence of air supply pressure: | $\leq 0.1\%$ between 1.4 and 6 bar |
| Air consumption at steady state condition: | With 0.6 bar signal pressure and supply pressures up to 6 bar ≤ 100 l/h |
| Ambient temperature: | -25°C to +70°C |
| Protection class: | IP 66 |


Flow sizes/tube connections

| Kv | Seat diam. (mm) | Tube connections (mm) | | Actuator (type no.) | |
|-------|--------------------|-----------------------|--------|---------------------|--------|
| | | ISO | DIN/DN | NO | NC |
| 0.5 E | 6 | 38 | 40 | 3277-5 | 3277-5 |
| 1.0 E | 10 | 38 | 40 | 3277-5 | 3277-5 |
| 2 E | 12 | 38 | 40 | 3277-5 | 3277-5 |
| 4 E | 14 | 38 | 40 | 3277-5 | 3277-5 |
| 8 E | 23 | 38 | 40 | 3277-5 | 3277-5 |
| 16 E | 29 | 38 | 40 | 3277-5 | 3277-5 |
| 25 E | 38 | 51 | 50 | 3277-5 | 3277-5 |
| 32 E | 48.5 | 51 | 50 | 3277-5 | 3277-5 |
| 40 E | 42 | 63.5 | 65 | 3277-5 | 3277-5 |
| 64 L | 51 | 63.5 | 65 | 3277-5 | 3277-5 |
| 75 L | 51 | 76.1 | 80 | 3277-5 | 3277-5 |
| 110 L | 72 | 101.6 | 100 | 3277-5 | 3277-5 |

Options

- A. Male parts or clamp liners in accordance with required standard.
- B. Lip seal of HNBR or Fluorinated rubber (FPM).
- C. Profibus communication
- D. Aseptic configuration Max 8 bar

Dimensions (mm)

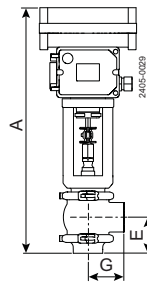


| Size | 38 | | 51 | | 63.5 | | 76.1 | | 101.6 | | DN40 | DN50 | DN65 | DN80 | DN100 | |
|-------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|------|-------|-------|-------|-------|-------|----|
| | NO/NC | NO/NC | NO/NC | NO/NC | NO/NC | NO/NC | NO/NC | NO/NC | NO | NC | NO/NC | NO/NC | NO/NC | NO/NC | NO | NC |
| A- std | 410 | 423 | 405 | 439 | 463 | 481 | 412 | 425 | 411 | 447 | 465 | 483 | | | | |
| A- aseptisk | 411 | 426 | 412 | 446 | 470 | 488 | 414 | 427 | 418 | 454 | 472 | 490 | | | | |
| E | 56 | 63 | 67 | 85 | 96 | 96 | 57 | 64 | 70 | 89 | 98 | 98 | | | | |
| G | 49.5 | 61 | 81 | 86 | 119 | 119 | 49.5 | 62 | 78 | 87 | 120 | 120 | | | | |
| H | 168 | 168 | 168 | 168 | 168 | 280 | 168 | 168 | 168 | 168 | 168 | 280 | | | | |
| OD | 38 | 51 | 63.5 | 76.1 | 101.6 | 101.6 | 41 | 53 | 70 | 85 | 104 | 104 | | | | |
| ID | 34.8 | 47.8 | 60.3 | 72.9 | 97.6 | 97.6 | 38 | 50 | 66 | 81 | 100 | 100 | | | | |
| t | 1.6 | 1.6 | 1.6 | 1.6 | 2 | 2 | 1.5 | 1.5 | 2 | 2 | 2 | 2 | | | | |
| M/ISO clamp | 21 | 21 | 21 | 21 | 21 | 21 | - | - | - | - | - | - | | | | |
| M/DIN clamp | - | - | - | - | - | - | 21 | 21 | 28 | 28 | 28 | 28 | | | | |
| M/DIN male | - | - | - | - | - | - | 22 | 23 | 25 | 25 | 30 | 30 | | | | |
| M/SMS male | 20 | 20 | 24 | 24 | 35 | 35 | - | - | - | - | - | - | | | | |
| Weight kg | 8.2 | 9.3 | 9.7 | 11.2 | 15.4 | 24.9 | 8.2 | 9.3 | 9.7 | 11.2 | 15.4 | 24.9 | | | | |


Capacity diagram

For $\Delta P = 100 \text{ kPa (1bar)}$.

Standard

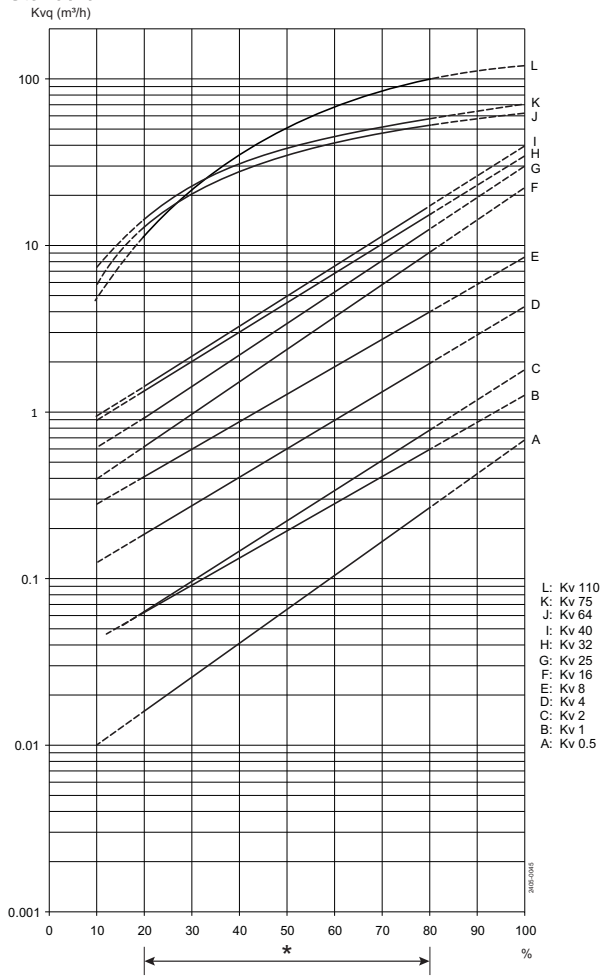

Aseptic

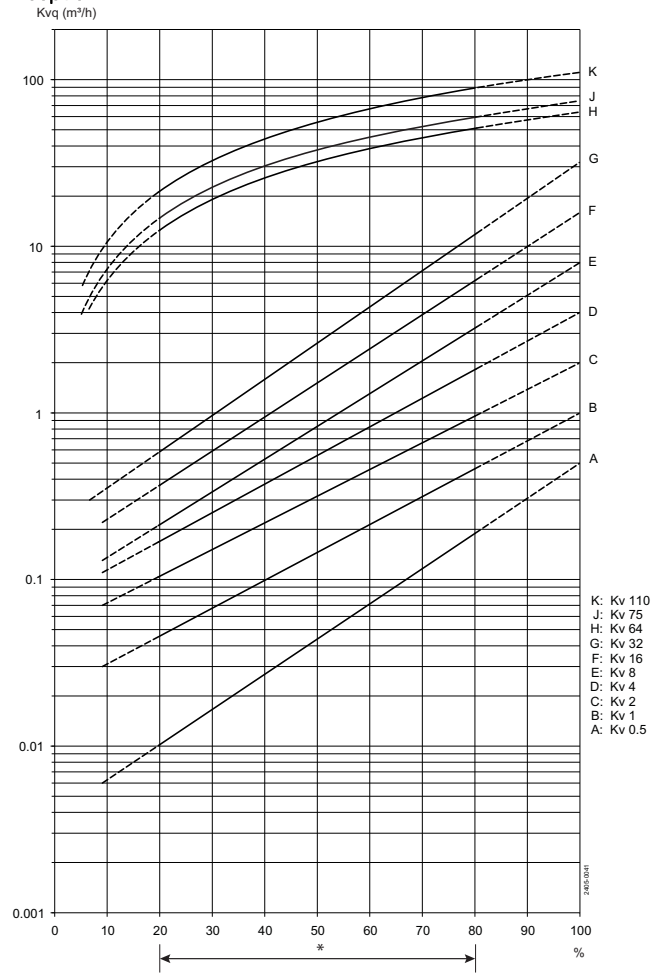

*Recommended working area

Note

For the diagram the following applies:
 Medium: Water (20°C).
 Measurement: In accordance with VDI 2173.
 Alfa Laval recommend max. flow velocity in tubing and valves to be 5 m/sec.

Pressure drop calculation

The Kv designation is the flow rate in m^3/h at a pressure drop of 1 bar when the valve is fully open (water at 20°C or similar liquids). To select the Kv value it is necessary to calculate the Kv_q value using the following formula:


$$Kv_q = \frac{Q}{\sqrt{\Delta p}}$$

Where:

- Kv_q = Kv value at specific flow and specific pressure drop
- Q = Flow rate (m^3/h)
- ΔP = Pressure drop over valve (bar)

Electrical connection

Electrical connection - Analoug 4-20 mA

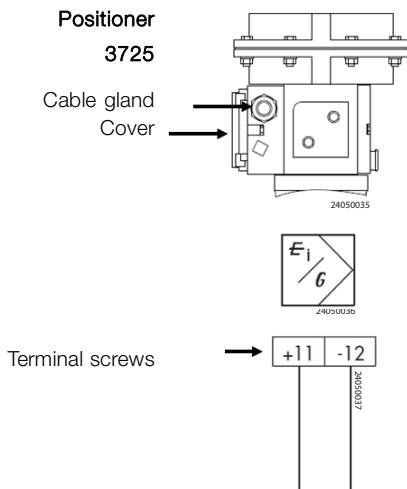


4-20 mA control signal

Route the two-wire line to the screw terminals marked "11 and 12", whereby the correct polarity has to be ensured

1. Open the cover of the positioner for electrical connection
2. Fit the cable through the cable gland and connect the cable wires to the terminal screws. (+11 and -12)
3. Tighten the cable gland and close the cover of the positioner

Electrical connection - Profibus PA

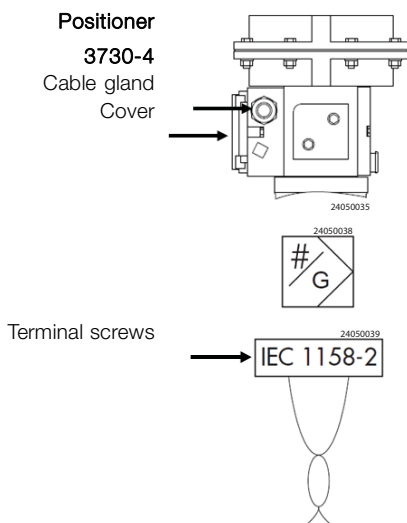

Bus control signal

Route the two-wire bus line to the screw terminals marked "IEC 1158-2", whereby no polarity has to be observed

1. Open the cover of the positioner for electrical connection
2. Fit the bus cable through the cable gland and connect the cable wires to the terminal screws. (IEC 1158-2)
3. Tighten the cable gland and close the cover of the positioner

By searching on positioner type 3730-4 you can either retrieve the GSD files for PROFIBUS PA communication directly from the World Wide Web server of Samson or the PROFIBUS User Organization

Alfa Laval reserves the right to change specifications without prior notification.

How to contact Alfa Laval

Contact details for all countries are continually updated on our website. Please visit www.alfalaval.com to access the information direct.